Pokrenite Internet explorer, Mozilla Firefox ili neki drugi web browser na Vašem računaru, a zatim u addres bar ukucajte: 192.168.0.1.

90	# Attp://192.168.0.1/	
2 2		

Za tim će Vam se otvoriti prozor za logovanje u ruter:

onnect to 19	2.168.0.1	<u> </u>
The server 192.1 password.	68.0.1 at DI-524 requires a u	username and
Warning: This ser password be sen without a secure	ver is requesting that your u t in an insecure manner (basic connection).	sername and : authentication
User name:	🕵 admin	~
Password:	•••••	
	Remember my passw	ord
	ОК	Cancel

U gornje polje ukucajte korisničko ime a u donje širfu koju Vam je ostavila osoba koja Vam je podešavala ruter. Fabrički : <u>user:</u> admin <u>password:</u> admin.

Za tim će Vam se otvoriti početna stranica rutera:

1	Home	Advanced	Tools	Status	Help
DI-524	Setup Wizard				
Wizard	The DI-524 is a business netw connect to yo you to have Ir bystep to conf	an Ethernet Broadba rorking. The setup w ur ISP (Internet Serv nternet access within figure the DI-524.	nd Router idea zard will guide ice Provider). T minutes. Pleas	I for home network e you to configure I The DI-524's easy se se follow the setup	king and small the DI-524 to etup will allow wizard step
WAN			Run Wizard		
LAN					0
DHCP					Help

A zatim na lijevoj strani pronađite opciju "WAN" i kliknite na nju:



Prijmjetićete da je obilježena opcija PPPoE, Vi ćete odabrate opciju "Dynamic IP Adress":

Apply Cancel Help

Home	Advan	ced Too	DIS	Status	Help
WAN Setting Please select	is the appropriate o	ption to connect to	your ISP.		
Oynamic	IP Address	Choose this op from your ISP. (	tion to obtain For most Cab	an IP address and and IP address and a second se	utomatically 3)
Static IP	Address	Choose this op you by your ISP.	tion to set sta	tic IP information	n provided to
O PPPoE		Choose this op users)	tion if your ISI	P uses PPPoE. (I	For most DSL
O Others		PPTP, BigPond	d Cable , L2Th	P and Telia.	
Dynamic IP	Address				
Host Name				(Optional)	
MAC Address		00 - 22 - Clone MAC 4	B0 A9	- <mark>4F</mark> - 95	
Primary DNS	Address	0.0.0.0			
Secondary DM	NS Address	0.0.0.0			
MTU		1500			
Auto-reconne	ct	O Enabled 🧕	Disabled		
Do not chang	e the TTL value	Enabled C	Disabled		
		Enabled	Disabled		

Zatim u dnu stranice kliknite na opciju Apply:



Ruter će se restartovati, sačekajte otprilike 30-60 sekundi, da bi ruter pokupio nova podešavanja, i zatim pokušajte pokrenuti internet pretraživač koji koristite (Internet explorer, Mozilla Firefox, Google Chrome,...).

Da bi ste bili sigurni da ste podešavanja uradili kako treba kliknite na opciju "status" u gornjem meniju, i zatim će Vam se na sredini stranice prikazate prozor koji će izgledati otprilike ovako:

WAN				
	MAC Address	00-22-B0-A9-4F-9	5	
	Constanting	DHCP Client Connected.		
	Connection	DHCP Renew	DHCP Release	
Rem	aining Lease Time	19:56:36		
	IP Address	79.143.167.160		
	Subnet Mask	255.255.255.0		
	Gateway	79.143.167.1		
Do	main Name Server	79.143.160.20, 79	.143.168.8	

Time bi podešavanja bila gotova.